
## **TAIL SUPPORT ASSEMBLY**

**GEAR JACK MODEL GJ-TSA-LP** 

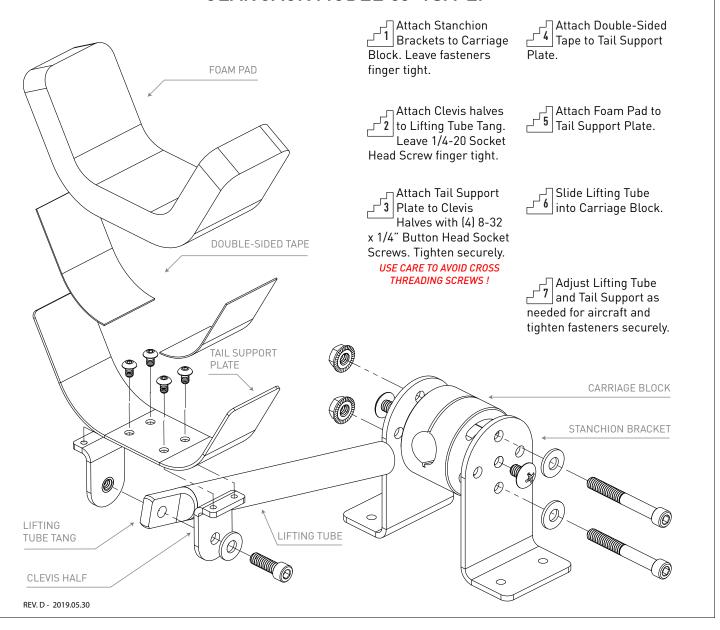

## TOOLS

Required: 3/32" Hex Key, 3/16" Hex Key, #2 Phillips screwdriver

Optional: Threadlocker (Blue Loctite®)

## NOTES:

- 1. At Step 3: Take extra care to avoid cross threading Button Head Screws.
- 2. At Step 3: Threadlocker (Blue Loctite®) is not required but may be used.
- 3. At Step 5: Test fit both the double-sided tape and foam pad to determine margins prior to assembly.

